

Installing Optional Equipment

The following sections offer descriptions of optional hardware or configurations in which the Envizio Pro is capable of operating.

Boom Sense Wire


The boom sense wire may be connected to the master switch functions of the machine to allow seamless operation of vehicle master on/off and the field computer mapping feature.

If the boom sense wire is properly connected, the vehicle master on/off switch also toggles the product coverage mapping based on a +12V signal detected on this wire.

Generation 1 Cabling

Connect the spade connector on the main interface cable (P/N 115-0171-746) labeled “Ext. Switch” (external switch) to the machine master switch.

FIGURE 8. Main Interface Cable (P/N 115-0171-746) Boom Sense Wire Connection

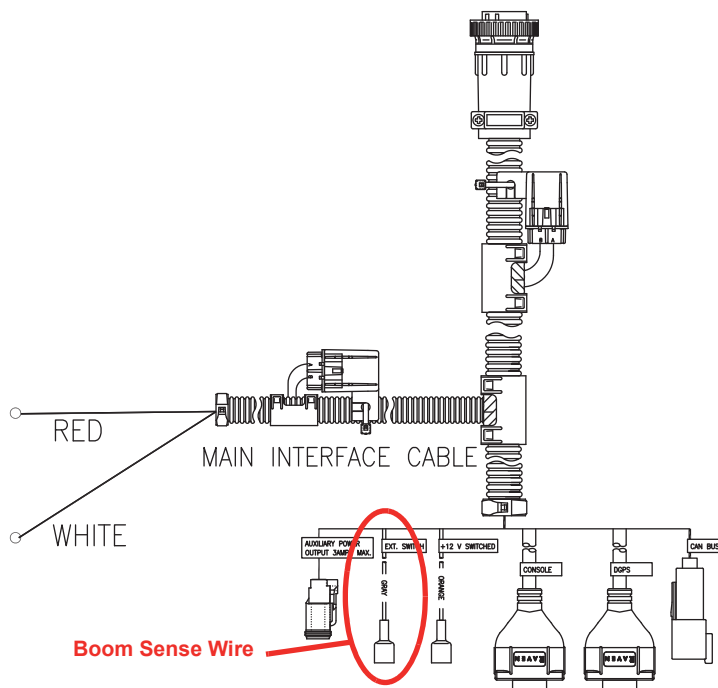

Note: Contact the machine manufacturer for more information on connecting the boom sense wire on the specific machine.

