


X30 Software Upgrade Installation Instructions:

- On a Windows7 machine, unzip the installation ZIP file into the root folder of a USB flash drive.
- On Windows7 double clicking the install\_mbr.cmd file will not provision the thumb drive for upgrading.
  - a. You must run command prompt in

## administrator mode.

- i. Press **Start** menu
- ii. Type in **cmd**
- iii. Right click on **cmd**
- iv. Select Run as administrator
- v. Type **d**: or whichever drive the thumb drive is and press enter.
- vi. Type **install\_mbr** and press enter.
- vii. You should see the message: **MBR installed on USB drive D**:

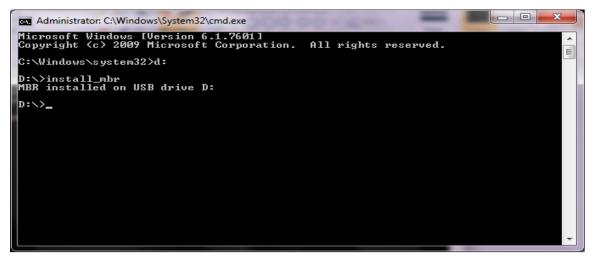

- 3. Safely eject the USB flash drive from the Windows machine.
- 4. Plug in the USB flash drive into the powered-down X30 console.

Open	
Enable/Disable Digital Signature Icons	
😵 Run as administrator	
digestIT 2004	
Scan for threats	
Add to archive	
Add to "cmd.rar"	
Compress and email	
Compress to "cmd.rar" and email	
Pin to Taskbar	
Pin to Start Menu	
Scan with Malwarebytes' Anti-Malware	
Restore previous versions	
Send to	,
Cut	
Copy	
Paste	
Delete	
Open file location	
Properties	



- 5. Power up the X30 console by pressing and holding the power button on the back of the console.
- 6. The installation procedure will start automatically and will take a few minutes.
- 7. After the installation is complete, the console will display the message "Please remove the USB flash drive."
- 8. Remove the USB flash drive. The console will restart automatically.
- 9. After the restart, the console will display the touch screen calibration screen. Touch the displayed cross marks in turn and then press "Confirm". This is only done ths first time after installation. The console will restart automatically.
- 10. After the console starts up, the software is ready for use.